



SAFETY INSTRUCTIONS

Your Kamira coffee maker has been designed for household use only. The manufacturer is not responsible for commercial or improper usage or failure to follow our instructions, all of which would void the warranty.

Your Kamira is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use by a person responsible for their safety. Children should not play with the Kamira.

WARNING, Kamira is a pressure appliance: to avoid burns do not remove the filter holder (E) before draining the bottom chamber (Fig. 14).

To drain your Kamira after making coffee, **slowly turn the lever of the drain valve (G) to avoid spillage of hot water from the tank (C).** During this operation keep the tank top (B) closed and keep your hand away from it.

Do not use coffee blends that are too fine (as for the espresso bar machines), use only coffee ground for a moka pot.

Your Kamira is equipped with a **safety valve (I)**. Bursts of steam and whistling indicate normal functioning of the safety valve and are caused by loading the Kamira with too much coffee, coffee that is too finely ground or too much water in the bottom chamber. **Do not alter the safety valve to avoid the conditions described.**


Always hold the appliance by the thermo handle (A).

Should there be problems with the Kamira, do not attempt repairs. Instead contact the service center. Failure to do so will void your warranty.

Leaving your Kamira on the stove for extended periods of time can damage the gaskets and non-metallic parts.

PREPARATION

Follow these instructions carefully and you will discover how quick and easy it is to prepare excellent rich espresso with Kamira.

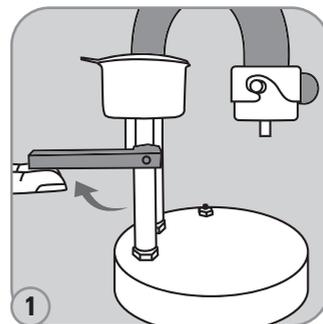

1 Bring the lever (G), that is under the water tank, to the horizontal position




2 Lift the water tank cover.




3 Fill the tank with water; half tank for one coffee, top it up for two coffees.



4 Bring the valve to a vertical position to fill the boiler*.

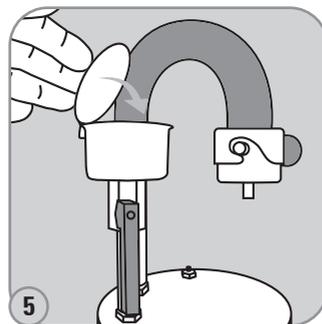


5 Close the water tank cover.

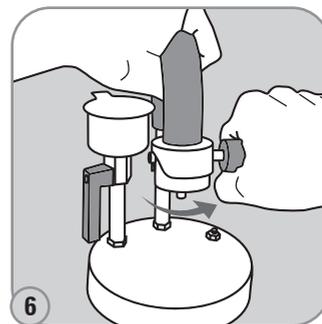


6 Remove the filter holder by pushing it counter clockwise.




7 Fill the filter with the desired amount of coffee, tamp it lightly, level off and clean the border.

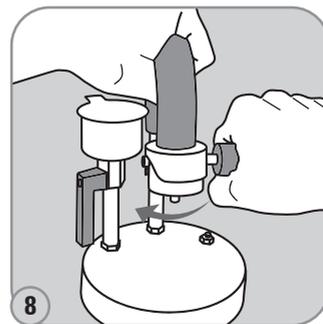

8 Insert the filter holder push it clockwise.

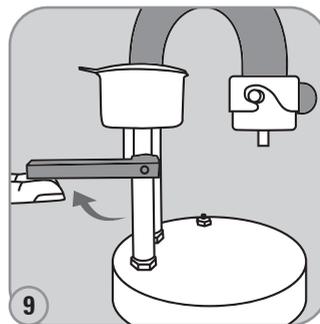


9 Return the valve back to the horizontal position.

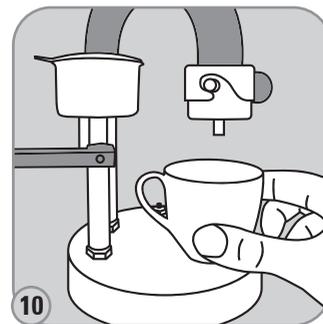


10 Put the cup on the boiler.



11 Place the Kamira on the average stove and set the burner to medium.

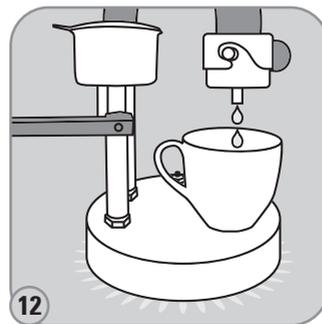

12 When the coffee starts brewing with beads of cream, set the burner to high for at least 8 to 10 seconds.

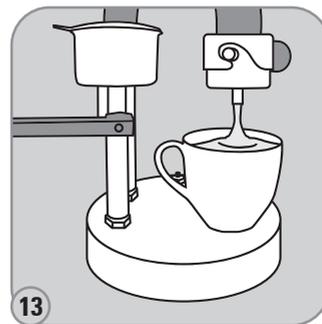

13 When the coffee cup is half full turn off the burner and let the coffee keep brewing.



14 Turn the valve slowly to the vertical to flush the residual pressure and stop brewing.

* If the water should not drain, put the Kamira on a source of heat for at least 3-4 seconds. .

TIPS FOR USE

• Use water with a low percentage of minerals, natural water is preferred.

• Empty the Kamira of excess water after each use. Failure to do so can have negative effects on taste.

Bring the valve (G) to the vertical position and turn the Kamira upside down to empty it.

USAGE TIPS

FIRST USE

For first time use or after a period of inactivity, season the water channel by preparing a coffee as usual. Do this twice or three times with the filter holder in place with the recommended dose of coffee.

FOR A WARM AND RICH ESPRESSO

Every time you first use the appliance making a serving of coffee is sufficient to pre-heat the machine. Put your Kamira on the stove with the valve (G) in

the horizontal position and the cup under the distribution spot. Do the operation for 10-15 seconds with the burner on high.

TO PREPARE SEVERAL CONSECUTIVE CUPS


To prepare several coffees consecutively, cool the boiler each time by holding it under the water tap. Warning: before doing it, turn the valve (G) to the vertical position.

MAINTENANCE

- Regularly check that all the elements of your Kamira are undamaged, in particular the gasket (D).
- Clean the appliance, only externally, using a normal dishwashing liquid.
- Keep the gasket receptacle clean.
- It is recommended to periodically remove the limescale that can build up in the boiler after a period of using the appliance. To do this you can

pour some vinegar (2 cups) in the boiler through the water tank. Leave the vinegar for 5-6 hours, bring the valve lever (G) to the horizontal position and turn the boiler of the Kamira upside down to drain it, at the end repeat the procedure for the first use.


- Use only original Kamira spare parts.

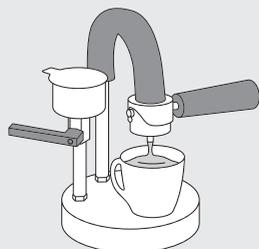

FILTER HOLDER FOR ONE CUP

PREPARATION WITH FILTER HOLDER FOR 2 CUPS

With the filter holder for 2 cups you can prepare two coffees simultaneously or simply obtain a double serving. The preparation of the coffee is the same as the filter holder for 1 cup, but in this case you have to top off the water tank.

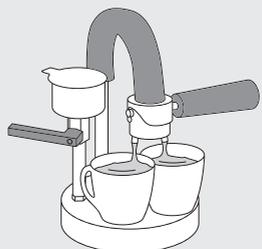

FILTER HOLDER FOR TWO CUPS

ISSUES	CAUSES	POSSIBLE SOLUTIONS
THE WATER DOES NOT PASS THROUGH THE WATER TANK TO THE BOILER.	THE LEVER (G) WAS LEFT IN THE HORIZONTAL POSITION.	TURN THE LEVER (G) TO THE VERTICAL POSITION
	A POCKET OF AIR WAS NOT RELEASED FROM THE BOILER.	PUT THE KAMIRA ON A SOURCE OF HEAT JUST FOR FEW SECONDS.
THE COFFEE DOES NOT BREW.	LEVER (G) REMAINED IN THE VERTICAL POSITION.	TURN THE LEVER (G) TO THE HORIZONTAL POSITION.
	THERE IS NO WATER IN THE BOILER.	PUT WATER IN THE BOILER.
	THE FILTER OF THE HOLDER IS CLOGGED UP.	CAREFULLY CLEAN THE FILTER.
WATER POURS OUT FROM THE FILTER HOLDER.	THE GASKET (D) IS WORN.	CHANGE THE GASKET.
	COFFEE HAS REMAINED ON THE FILTER HOLDER RIM.	THOROUGHLY CLEAN THE RIM.
SAFETY VALVE (I) WHISTLES OR RELEASES BURSTS OF STEAM.	COFFEE HAS BEEN TAMPED TOO FIRMLY IN THE FILTER HOLDER.	USE ONLY THE RECOMMENDED QUANTITY OF COFFEE, WITHOUT PRESSING TOO HARD.
	THERE IS EXCESS WATER IN THE BOILER.	REDUCE THE AMOUNT OF WATER.
	THE COFFEE IS GROUND TOO FINE.	USE ONLY COFFEE GROUND FOR A MOKA POT.
THE BREWED COFFEE IS TOO WEAK.	THE QUANTITY OF THE COFFEE IS POOR.	CORRECTLY FILL THE FILTER HOLDER.
	TOO MUCH WATER HAS BEEN USED.	POUR ONLY THE SUGGESTED AMOUNT OF WATER.
	THE KAMIRA IS TOO HOT.	TURN THE LEVER (G) TO THE VERTICAL POSITION AND COOL THE KAMIRA UNDER THE WATER TAP.
THE COFFEE IS NOT DISTRIBUTED EQUALLY INTO THE TWO CUPS.	THE STAND MAY BE TILTED.	PUT THE KAMIRA ON A LEVEL SURFACE. EXCHANGE CUPS FOR AN EQUAL DOSE.
	THE SUPPLIED COFFEE IS TOO THICK, TOO DARK AND TASTES BURNED.	
	THERE IS TOO MUCH COFFEE IN THE FILTER HOLDER.	USE THE CORRECT QUANTITY OF COFFEE.
	THERE IS NOT ENOUGH WATER.	USE THE CORRECT AMOUNT OF WATER.


WARRANTY. Kamira is warranted for five years from the date of purchase from any defects and compliance with the directive 99/44 CE; with the exception of the attachments that are subject to use such as gaskets, valves, levers, handles, links, etc.

VALIDITY OF WARRANTY . The warranty is valid only if: a) the Kamira has not been tampered with; even if only in part (safety valve included); b) all the instructions of this booklet have been fulfilled during its use; c) the appliance has not been damaged by negligence, accident, limescale deposit or other external reasons. The customer is responsible for shipment and service charges to bring the Kamira back to factory specifications. The manufacturer cannot be held responsible for damage from a use that is different from the instructions. The manufacturer is not responsible and will make no compensation for direct or indirect damage resulting from the use of the Kamira or for stopping using it. The customer is responsible for shipment and service charges to bring the Kamira back to factory specifications.

Kamira di Buscari Nazzareno · Via Francesco Crispi 452 · 98028 Santa Teresa di Riva (ME) · Italy
Telefono +39 331 3217731 · info@kamiraonline.com · www.kamiraonline.com

Kamira

The eco-friendly coffee machine for a creamy espresso

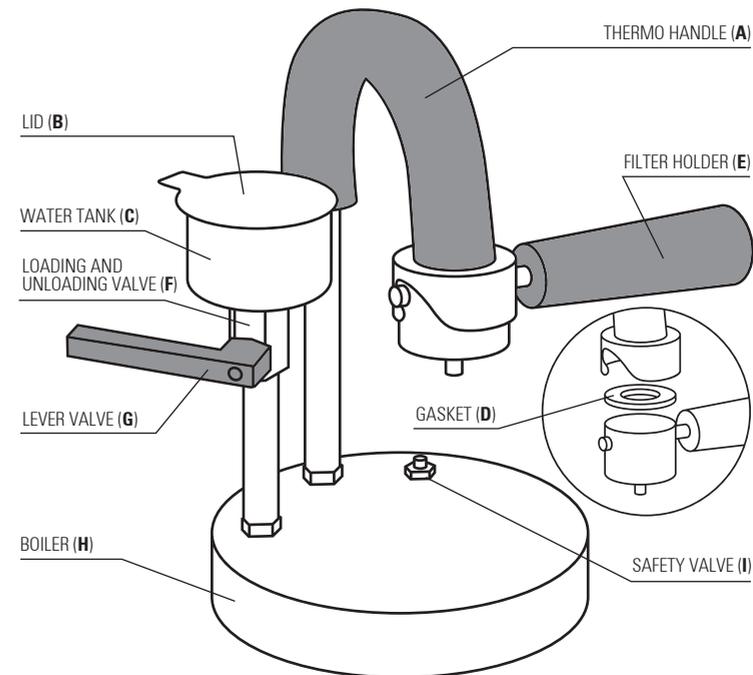

INSTRUCTIONS FOR USE